


VONDOM®

Instrucciones para la unión del acolchado en la tumbona REST

Padded assembly instructions
in REST sunbed

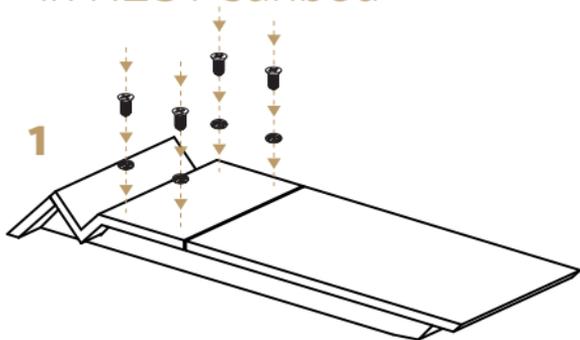

X4




X4



2

Acolchado con velcro en
la parte posterior.

Padded with hook and
loop system on the back.

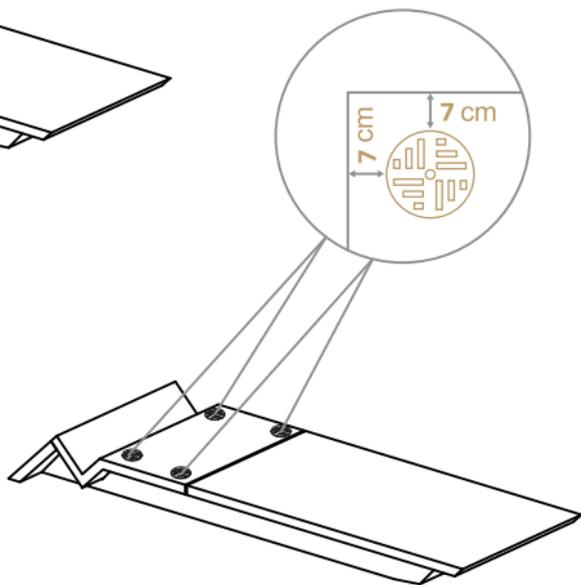

VONDOM S.L.U

Avda. Valencia 3 - 46891 - Palomar - Valencia - Spain

t. +34 96 239 84 86 - f. +34 96 290 05 01

www.vondom.com - info@vondom.com