
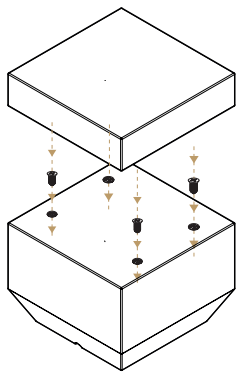


# VONDOM®

Instrucciones para la unión del acolchado  
Padded assembly instructions


X4 X4



1

Acolchado con velcro en  
la parte posterior.

Padded with hook and  
loop system on the back.

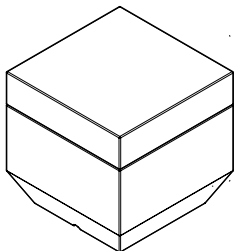

2