


# VONDOM

Colección QUARTZ/QUARTZ Collection  
instrucciones de montaje/assembly instructions




**A**

M6 x 14 mm  
x8




**B**

M6 x 25 mm  
x8




**C**

M6 x 30 mm  
x4




**D**

StackingTop  
Tope Apilado.  
x4



**E**

Leg  
Pata  
x4

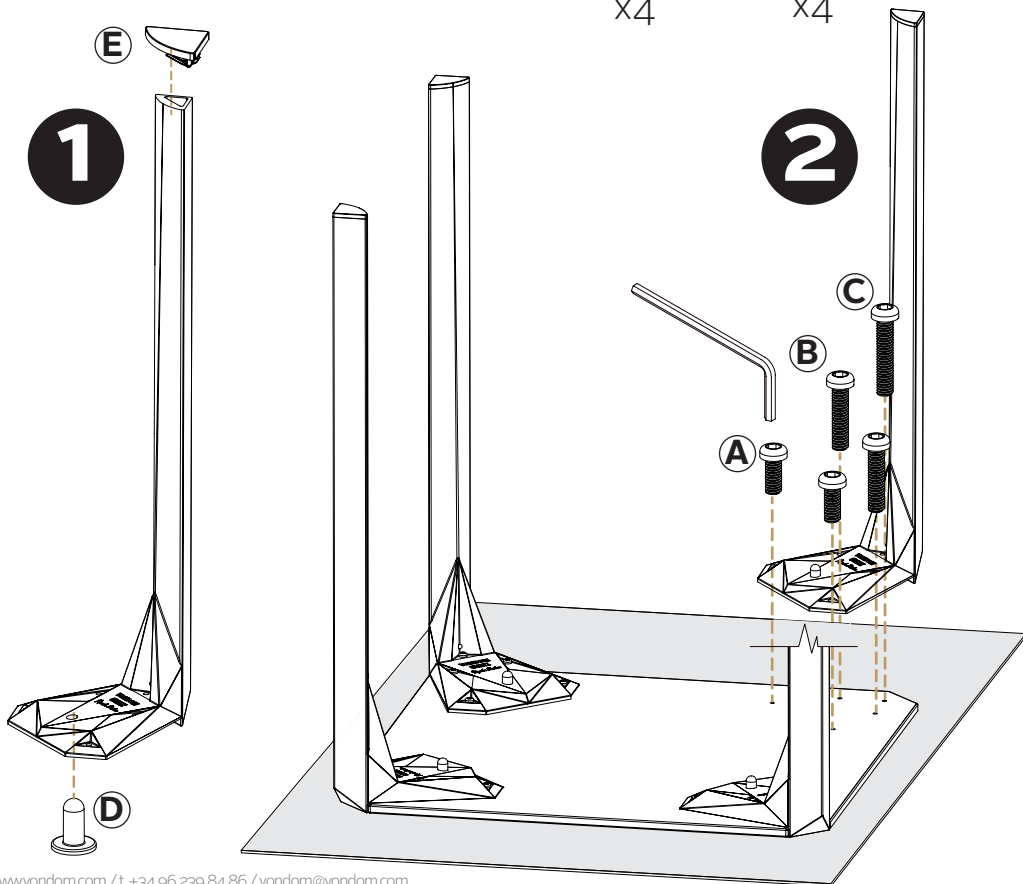


# VONDOM

Colección QUARTZ/QUARTZ Collection  
instrucciones de montaje/assembly instructions




**A**

M6 x 14 mm  
x6




**B**

M6 x 25 mm  
x6




**C**

M6 x 30 mm  
x3




**D**

StackingTop  
Tope Apilado.  
x3




**E**

Leg  
Pata  
x3

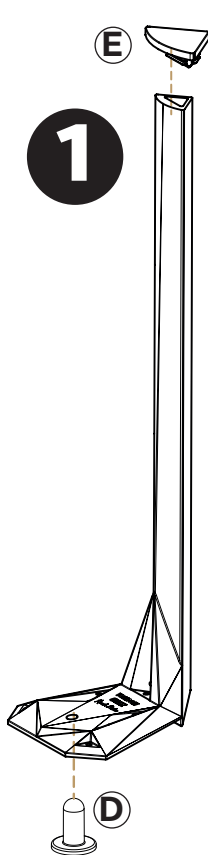

**1**

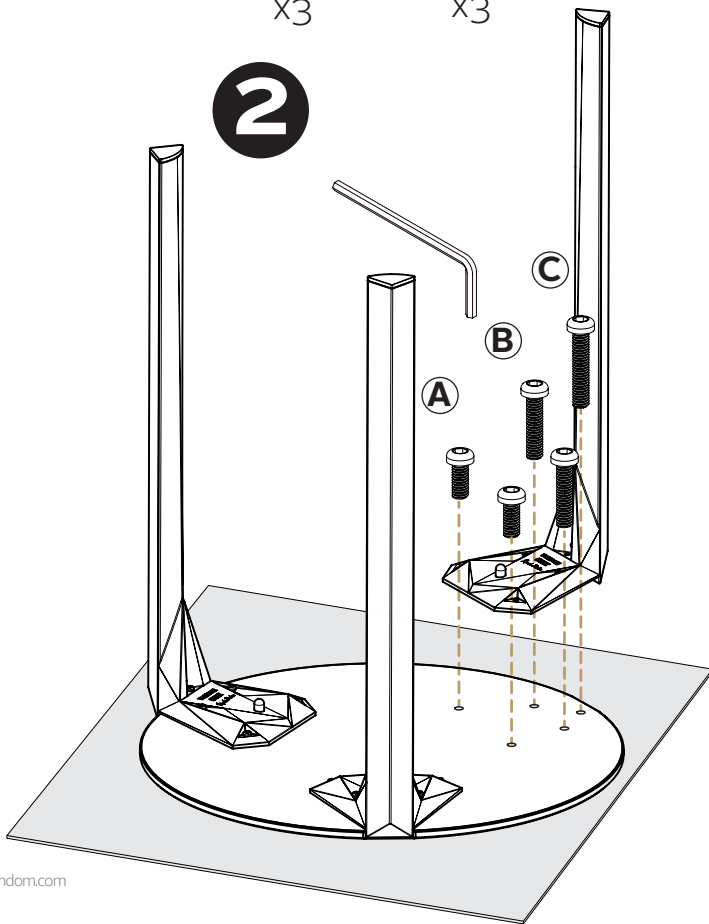

**2**


# VONDOM

Colección QUARTZ/QUARTZ Collection  
instrucciones de montaje/assembly instructions



**A**

M6 x 14 mm  
x8




**B**

M6 x 25 mm  
x8




**C**

M6 x 30 mm  
x4



**D**

StackingTop  
Tope Apilado.  
x4



**E**

Leg  
Pata  
x4

