



# VONDOM®

INSTRUCTIONS TO FLOOR FIX / INSTRUCCIONES PARA FIJAR AL SUELO

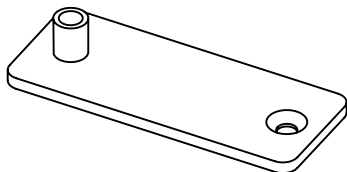

**a x5**




**b x5**




**c x5**



**d x5**

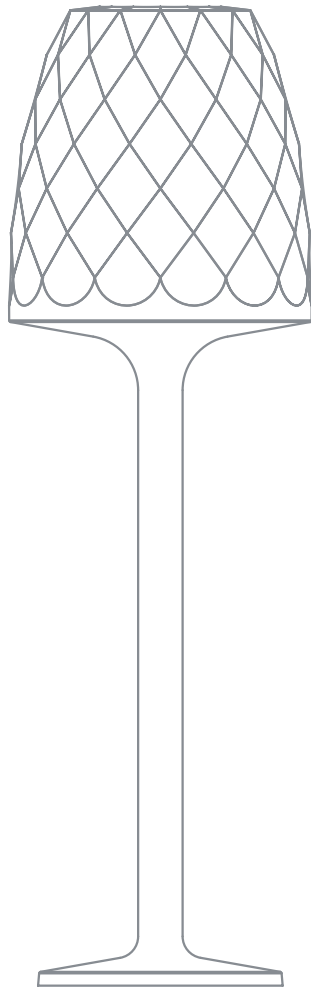

YOU NEED DRILL Ø 8 mm  
NECESITA BROCA Ø 8 mm

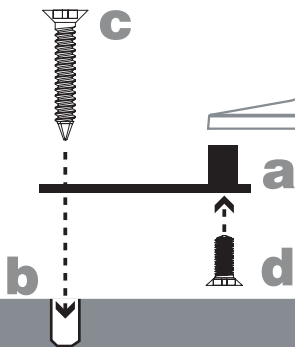

SUELO / FLOOR